


Mounting Brackets for GrillPro Universal Rotisseries

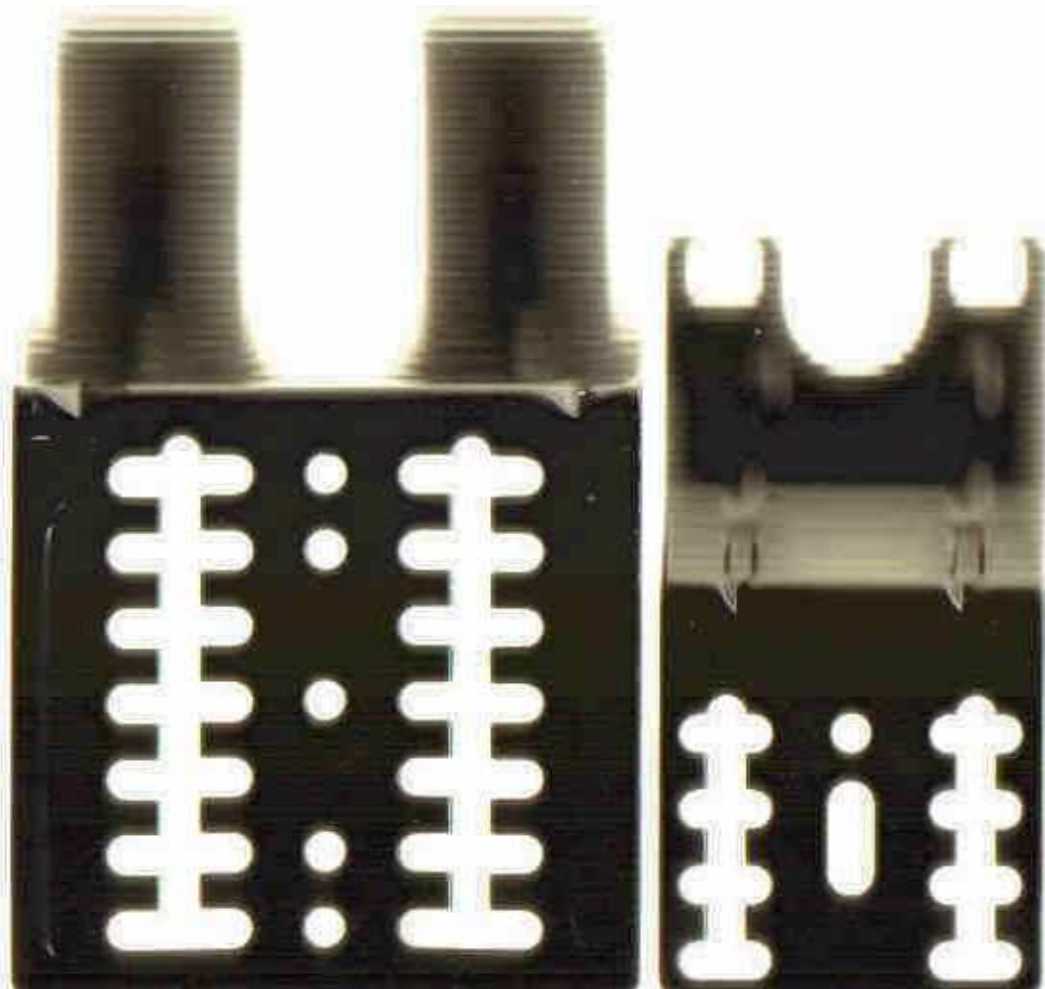

Instructions: Print this page; take the printed page to your grill. Lift the hood of the grill on either side of the grill you will see a notch; below those notches are a pair of screw holes. These are the holes that these brackets will mount onto. Place this sheet onto the outside of the grill and line up the center cutout of the large bracket with the notch in your grill (you are better off being a little low with the paper than to high), if you can see white through the screw holes it will fit.

Now take a tape measure and measure the length of your grills hood, add 3" and that is the length of spit-rod that you will require.